#### KIT CONTENTS

Index	Part Number	Description	Qty.
1	80587	MOUNTING BRACKET	1
2	11022-05200	SCREW, 5MM X 20MM, INCL. WASHER & LOCKWASHER	1
3	80588	BALL VALVE, 3/8 NPT*, FEMALE BOTH ENDS	1
4	80597	ADAPTER, 3/8 NPT* MALE X GHT** FEMALE	1
5	80598	MALE QUICK-DISCONNECT FITTING WITH MALE GHT**	1
6	80599	FEMALE QUICK-DISCONNECT FITTING WITH FEMALE GHT**	1
7	80600	HOSE FITTING MALE GHT** X 1/2-INCH HOSE BARB (80602 KIT)	1
7	80629	HOSE FITTING MALE GHT** X 5/8-INCH HOSE BARB (80632 KIT)	1
8	80601	HOSE CLAMP, 9/16" TO 1-1/16" RANGE	1
9	80589	SPACER	1
10	80590	MALE TUBE FITTING, 3/8" NPT* MALE X 1/4" TUBING	1
11,12	80594	NOZZLE, PLATED BRASS W/2 PLASTIC NOZZLE WASHERS	2
13	80592	PUSH CONNECT DOUBLE NOZZLE MOUNT, 1/4" TUBE	1
14	80593	PUSH CONNECT SINGLE NOZZLE MOUNT, 1/4" TUBE	1
15	80596	CAP, BRASS 1/8" NPT*	2
ılk <sup>16</sup>	80605	LONG TUBE, 15-1/2" CUT FROM BULK 1/4" POLYETHYLENE TUBE	1
ılk <sup>17</sup>	80605	SHORT TUBE, 9-1/2" CUT FROM BULK 1/4" POLYETHYLENE TUBE	1


<sup>\*</sup> NPT = National Pipe Thread

Index Numbers correspond to call out numbers in Figures 1 and 2 of the previous page.

## shindaiwa

Shindaiwa Inc. 11975 S.W. Herman Rd. Tualatin, Oregon 97062 Telephone: 503 692-3070 Fax: 503 692-6696 www.shindaiwa.com

©2002 Shindaiwa, Inc. Part Number 80586 Revision 9/02 Printed in U.S.A.

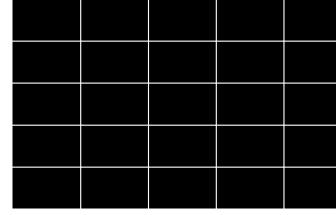

#### **INSTALLATION INSTRUCTIONS**

# **Dust Suppression Water System Kit**

P/N 80602 (1/2" Supply Hose) P/N 80632 (5/8" Supply Hose) FOR SHINDAIWA EC7500 AND EC7600 ENGINE CUT-OFF SAWS




#### **WARNING!**

Before performing any work on the cutoff saw, make sure the engine is stopped and the ignition switch is OFF.

#### **IMPORTANT!**

The dust suppression water system is meant to be used with diamond cut-off wheels only.

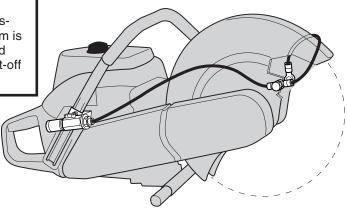

### **shindaiwa**

<sup>\*\*</sup>GHT = Garden Hose Thread



#### **WARNING!**

The dust suppression water kit should NOT be used with abrasive-type cut-off wheels.

The dust suppression water system permits a water hose to be connected to the cut-off saw. When the hose is pressurized from a locally available water source, the system will deliver water to the cut-off wheel to aid in the suppression of dust during operation. **Before installation, remove the cut-off wheel** (refer to the Owner's Manual supplied with your cut-off saw), then install the water kit as follows.

#### **IMPORTANT!**

The terms left-hand and right-hand refer to directions as viewed by the operator during normal operation.

#### Kit Installation

- 1. Remove the existing socket-head capscrew from the upper right-hand saw handle mount, then attach the mounting bracket (1) using the sockethead capscrew (2) provided with the Kit. See Figure 1.
- 2. Position the valve assembly (3, 4, 5 ass'y) and spacer (9) to the mounting bracket and secure it with the male tube fitting (10). Make sure the valve handle is positioned up. See Figure 1.
- 3. Position the nozzles (11) in the mounting holes of the cut-off wheel guard, install one washer (12), the nozzle mounts (13 and 14) and then another washer (12) over the threads as shown in Figure 2 with the double nozzle (13) on the right, and single nozzle (14) on the left.
- 4. Thread on the brass caps (15) finger-tight.

- 5. Connect the long tube (16) from the double nozzle mount to the handle-mounted valve.
- 6. When the hoses are aligned and free of kinks, securely tighten the brass caps (15).

#### **IMPORTANT!**

Do not permit the long tube to loop UNDER the knob on the wheel guard. Refer to Figure 3.

- 7. Install the cut-off wheel as outlined in the Owner's Operator's Manual.
- 8. Insert the hose fitting (7) into a garden hose and secure it with the hose clamp (8). Attach the female quick-disconnect fitting (6) to the hose fitting, then connect the female quick-disconnect fitting to the male quick-disconnect fitting (5) on the valve assembly. See Figure 4.

When the hose is connected to a pressurized water source, the water system is ready for use. The control handle on top of the valve will provide control of the water flow rate.


#### **IMPORTANT!**


Adjust the valve to provide adequate dust suppression with the least amount of water flow.


#### NOTE!

To avoid clogging that can result from operation, thoroughly clean up the cutoff saw and dust suppression system with water after each use.

A parts list appears on the back page of these instructions.

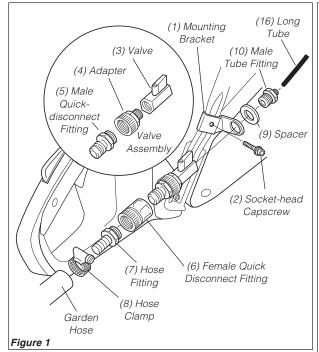

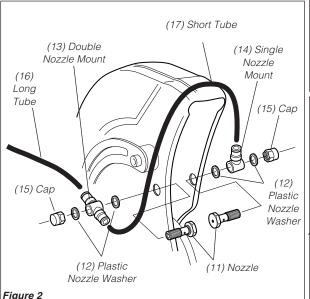

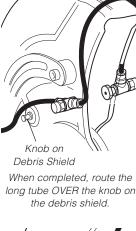



DO NOT permit the long tube to loop under the knob on the cut-off wheel guard.

Figure 3

